

Technical Data Sheet 8100000000:

EASY-SPLIT – Auxiliary Support for Split Unit Installation

Auxiliary tool designed to facilitate the installation of indoor split air-conditioning units, optimizing assembly and reducing working time.



General Description

Product:	Auxiliary support for split unit installation
Type:	Temporary support system for indoor units
Applications:	Domestic and professional air-conditioning installation
Packaging:	Complete box with assembly instructions

Technical Features

Material:	High-strength galvanized steel
Thickness:	5 mm
Operating system:	Mechanical support with fixing spring
Configuration:	Dual-support system with different lengths
Compatibility:	Suitable for most indoor split units
Installation:	Fixed to the manufacturer's mounting template

Included Accessories

Supports:	2 angle bracket units (135 mm and 230 mm)
Fixing system:	EASY-SPLIT retaining spring
Packaging:	Box with detailed assembly instructions
Documentation:	Installation manual included

Key Benefits

- Allows split units to be installed more comfortably, keeping the unit away from the wall.
- Facilitates access to refrigerant connections, drainage and electrical components during installation.
- Adaptable system: left/right mounting option according to connection requirements.
- Reduces installation time and labor costs.
- Improves installer ergonomics and installation safety.

Additional Information

Main material	Galvanized steel
Structure thickness	5 mm
Finish	Anti-corrosion treatment
Use	Professional HVAC installation
Warranty	3 years

☒ Assembly Instructions (Summary)

1. Fix and level the manufacturer's mounting template on the wall.
2. Install the small support on the upper right side.
3. Install the large support on the upper left side.
4. Hang the unit on the supports to carry out connections comfortably.

Recommendations for Use

- Always check that the mounting template is correctly fixed before installing the supports.
- Install the small support first (135 mm), followed by the large one (230 mm).
- Adjust the spring correctly to ensure unit stability.
- Once the connections have been completed, remove the supports and permanently fix the split unit to the wall.